## **RFR - RF Room Thermostat**

## Page 1 of 1 **Installation Instructions** For use in normal environments.


**CAUTION!** Installation and connection should only be carried out by a qualified person and in accordance with national wiring regulations.


- If this thermostat is used in a way not specified by the maufacturer, it's safety may be impaired.
- Ensure that this wireless enabled thermostat is installed 1 metre from any metallic object, television, radio or wireless internet transmitter.


This thermostat can be mounted in the following ways:


- To a recessed conduit box
- To a surface mounted box
- Directly mounted on wall
- Table mounted with accessory provided.




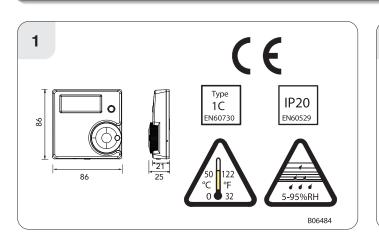


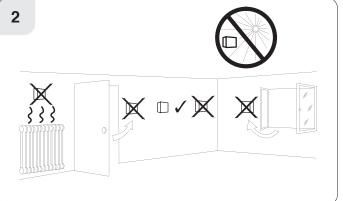

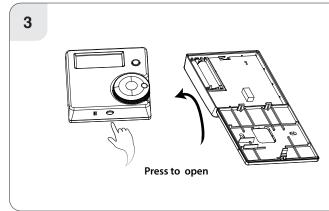

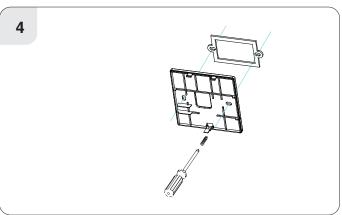

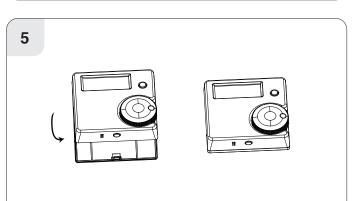

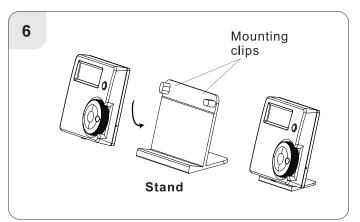



## **EPH Controls Ireland**

sales@ephcontrols.com www.ephcontrols.com

**EPH Controls UK**