



Fitting Instructions

1. Remove rubber seals from aluminium section. Check width between inside faces of the doorframe rebate and cut aluminium section to this size (see illustration).

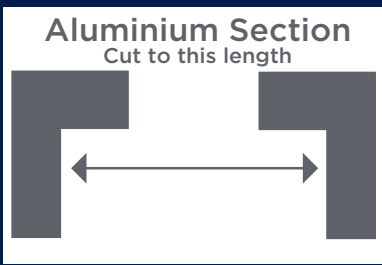

2. Cut rubber seals to length of the aluminium and re-insert into the groove in sill.
3. This sill requires an underdoor clearance of 18mm. If necessary remove door and trim to allow for this, ensuring bottom of door is smooth to avoid damage to rubber seal.
4. Position the assembled sill between the doorframe and mark fixing points through countersunk holes. Remove sill, drill fixing holes and insert plugs.
5. Apply sealing compound (Exitex Elast-O-Sealant) to underside groove at front of sill, ensuring rubber seal at rear is insitu and screw sill into place.

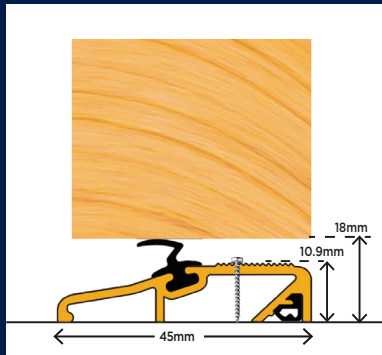

Exitex™

SEALED IN QUALITY

Exitex Ltd
Dundalk
Ireland
T: (+353 42) 9371244
Email: info@exitex.com

www.exitex.com